

The Classé CP-700 uses RC6 protocol for infrared communications. The following list of infrared codes can be used to program a universal or learning remote control. The Classé Remote Control uses a frequency of 56.0 kHz. Please refer to your remote control's user manual for information on how to program your remote control.

Sys code	IR code	Action
016	1	Toggle Tape Monitor on/off
016	2	Change input to Line 1 (input 1)
016	3	Change input to Line 2 (input 2)
016	4	Change input to Line 3 (input 3)
016	5	Change input to Bal. 1 (input 4)
016	6	Change input to Bal. 2 (input 5)
016	10	Go to next input (input -)
016	11	Go to previous input (input +)
016	12	Toggle Standby/Operate
200	13	Toggle Mute/Unmute
016	14	Info (go to Status screen)
016	15	Cycle through display intensities (low/medium/high)
200	16	Volume up (volume +)
200	17	Volume down (volume -)
016	20	Toggle phono gain
016	21	Balance (go to Main Balance screen)
200	56	Function key F1
200	57	Function key F2
016	84	Menu
016	85	Home
016	88	Step up (navigate up, +)
016	89	Step down (navigate down, -)
016	90	Step left (navigate left)
016	91	Step right (navigate right)
016	92	Enter
200	134	Function key F3
200	135	Function key F4
016	150	Set unit in Operate (turn unit on)
016	151	Set unit in Standby (turn unit off)
200	152	Set Mute mode on (mute)
200	153	Set Mute mode off (unmute)
016	154	Set Tape Monitor on
016	155	Set Tape Monitor off

016	244	Turn output 1 on
016	245	Turn output 1 off
016	246	Turn output 2 on
016	248	Turn output 2 off
016	249	Turn output 3 on
016	250	Turn output 3 off