

The Class  SSP-300 / SSP-600 uses RC6 protocol for infrared communications. The following list of infrared codes can be used to program a universal or learning remote control. The Class  Remote Control uses a frequency of 56.0 kHz.

Please refer to your remote control's user manual for information on how to program your remote control.

Sys code	IR code	Action
116	1	Toggle Tape Monitor on/off
116	2	Change input to Line 1 (input 1)
116	3	Change input to Line 2 (input 2)
116	4	Change input to Line 3 (input 3)
116	5	Change input to Line 4 (input 4)
116	6	Change input to Line 5 (input 5)
116	7	Change input to Line 6 (input 6)
116	8	Change input to Line 7 (input 7)
116	9	Change input to Line 8 (input 8)
116	10	Go to next input (input -)
116	11	Go to previous input (input +)
116	12	Toggle Standby/Operate
200	13	Toggle Mute/Unmute
116	14	Info (go to Status screen)
116	15	Cycle through display intensities (low/medium/high)
200	16	Volume up (volume +)
200	17	Volume down (volume -)
116	18	THX
116	19	Toggle Dolby Late Night Compression
116	20	Zone (go to Zone Control screen)
116	21	Trim (go to System Trims screen)
200	56	Function key F1
200	57	Function key F2
116	68	Mode (go to Mode Select screen)
116	84	Menu
116	85	Home
116	88	Step up (navigate up, +)
116	89	Step down (navigate down, -)
116	90	Step left (navigate left)
116	91	Step right (navigate right)
116	92	Enter
116	120	Change input to Line 9 (input 9)

116	121	Change input to Line 10 (input 10)
116	122	Change input to Line 11 (input 11, 7.1 input)
116	123	Change input to Line 12 (input 12, tape monitor)
200	134	Function key F3
200	135	Function key F4
116	145	Set Zone Mute mode on (zone mute)
116	146	Set Zone Mute mode off (zone unmute)
116	147	Toggle Zone Mute
116	148	Zone volume up (zone volume +)
116	149	Zone volume down (zone volume -)
116	150	Set unit in Operate (turn unit on)
116	151	Set unit in Standby (turn unit off)
200	152	Set Mute mode on (mute)
200	153	Set Mute mode off (unmute)
116	154	Set Tape Monitor on
116	155	Set Tape Monitor off
116	156	Set THX mode on (THX on)
116	157	Set THX mode off (THX off)
116	160	Set Dolby Late Night Compression on (Night on)
116	161	Set Dolby Late Night Compression off (Night off)
116	162	Trim front L/R (go to Level Trims – L/R Balance screen)
116	163	Trim center (go to Level Trims – Center screen)
116	164	Trim surround L/R (go to Level Trims – Surround screen)
116	165	Trim sub (go to Level Trims – Subwoofer screen)
116	169	Change Zone Input to Line 1 (input 1)
116	170	Change Zone Input to Line 2 (input 2)
116	171	Change Zone Input to Line 3 (input 3)
116	172	Change Zone Input to Line 4 (input 4)
116	173	Change Zone Input to Line 5 (input 5)
116	174	Change Zone Input to Line 6 (input 6)
116	175	Change Zone Input to Line 7 (input 7)
116	176	Change Zone Input to Line 8 (input 8)
116	177	Change Zone Input to Line 9 (input 9)
116	178	Change Zone Input to Line 10 (input 10)
116	179	Change Zone Input to Line 11 (input 11, 7.1 input)
116	180	Change Zone Input to Line 12 (input 12, tape monitor)
116	185	Switch to Listening Position 1
116	186	Switch to Listening Position 2
116	187	Switch to Listening Position 3

116	188	Switch to Listening Position 4
116	193	Change to mode 1 (multichannel)
116	194	Change to mode 2 (multichannel+THX)
116	195	Change to mode 3 (Dolby Pro Logic)
116	196	Change to mode 4 (Dolby Pro Logic+THX)
116	198	Change to mode 6 (music mode natural)
116	199	Change to mode 7 (music mode party)
116	204	Change to mode 12 (mono)
116	205	Change to mode 13 (mono+THX)
116	207	Change to mode 15 (surround 6.1)
116	208	Change to mode 16 (stereo)
116	209	Change to mode 17 (stereo+THX)
116	210	Change to mode 18 (Dolby Pro Logic II Movie)
116	211	Change to mode 19 (Dolby Pro Logic II Movie+THX)
116	212	Change to mode 20 (Dolby Pro Logic II Music)
116	228	Change to mode 24 (Dolby Digital EX)
116	229	Change to mode 25 (THX Music)
116	230	Change to mode 26 (THX Ultra2 Cinema)
116	231	Change to mode 27 (THX Surround EX)
116	232	Change to mode 28 (DTS Neo:6)
116	233	Change to mode 29 (DTS Neo:6+THX)
116	234	Change to mode 30 (DTS Neo:6 Cinema)
116	235	Change to mode 31 (DTS Neo:6 Cinema+THX)
116	236	Change to mode 32 (DTS Neo:6 Music)
116	237	Change to mode 33 (DTS Matrix 6.1)
116	238	Change to mode 34 (DTS Matrix 6.1+THX)
116	239	Change to mode 35 (stereo 24/96)