


This update is performed by burning a CD, loading it into your disc player, then following a few simple steps. However, once the CD has been loaded into your player you must not turn the unit off or put it into standby until the touch screen turns green.

We therefore suggest that you read these instructions before attempting the update:

1. If you have not already done so, save the .upd file to your desktop and burn a DATA CD at the slowest speed possible, preferably x4 or x2.
2. Power up the disc player and the video display device that it's connected to. When the touch screen displays "please insert a disc" insert the CD. A grey display will appear beneath the blue playback keys on the LCD touchscreen. Moments later the blue playback keys will disappear to leave the following screen:

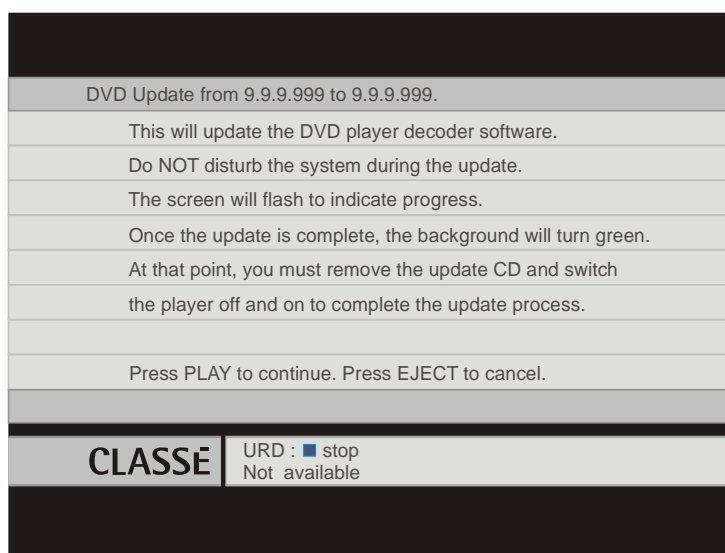

**WARNING - DO NOT TURN OFF YOUR UNIT BEFORE YOU REACH STEP 7. DOING SO WILL ERASE THE VIDEO PROCESSING SOFTWARE AND DISABLE THE UNIT.**

**IN THE UNLIKELY EVENT OF YOUR ENCOUNTERING DIFFICULTIES BETWEEN STEPS 3 AND 6 PLEASE CONTACT YOUR NEAREST CLASSE SERVICE CENTER**

3. Press PLAY on your remote, OR press the LCD touchscreen to bring the playback keys onto the LCD then press PLAY on the LCD touchscreen.
4. Soon afterwards, the CD will eject and the gray instructions screen will remain frozen for about 30 seconds.
5. The screen will then begin to RAPIDLY FLASH, alternating between the gray instruction screen and a black screen displaying the Classé logo.
6. When the screen stops flashing it will display an empty green screen. This green screen indicates that the software has now been successfully loaded.
7. Turn off the unit using the switch at the back then turn it back on again. The software is now reconfiguring the processor.
8. When the unit displays "please insert a disc" the update is complete.