

### UPDATING YOUR DISC PLAYER FOR THE FIRST TIME? READ ME!

Your player is powered by two microprocessors, each of which has its own specific software. You want to ensure that you are running the latest version of each software.

To do this take the unit out of standby so that the LCD screen displays "please insert a disc".

Press the MENU button that is beside the screen, then press "STATUS" on the LCD screen, followed by "VERSION INFO".

If you are running the latest version of both software packages then...

- the first three digits of the "firmware" number will be the same as that displayed next to the .pkg file in the unit's Firmware Update file.
- the "hardware" number will be the same as the number displayed next to the .zip file in the MPEG Software Update file.

If you are running an earlier version of either or both software, then you should first read the RELEASE NOTES to confirm that the update is necessary for your unit. If you need to update your player then each type of software is downloaded in a different way:

#### Firmware update

The .pkg software is loaded by connecting your computer to the unit via a pin to pin RS232 cable.

File contents (Classé website):

- .pkg file
- Software Update Procedure for GUI models.pdf




#### MPEG decoder update

The .UPD file should be burned onto a CD which can simply be loaded into your component.

File contents (Classé website):

- .zip file (containing the .UPD file)
- MPEG Decoder update procedure.pdf

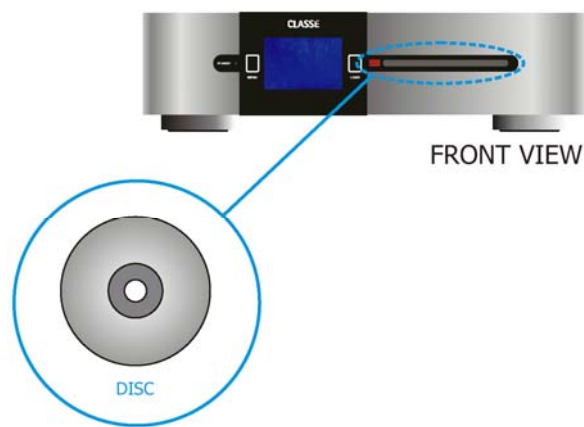

Please return to Classé website if you would like to download these files.